

## MAINTENANCE AND CLEANING

**Regular cleaning (weekly)** is needed to keep your product in a nice condition. Use warm water with a soft detergent and cotton cloth. We advice the **FlexPlus cleaner™**, a special universal cleaner for maintenance and keeping your product fresh.



**WARM  
WATER**



**SOFT  
DETERGENT**




**COTTON  
CLOTH**



**FLEXPLUS  
CLEANER™**

**!** **Advice** for outdoor usage for **FlexPlus™** products:

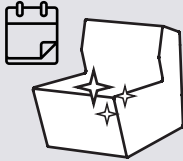

**Weekly cleaning** is needed to keep your product clean and avoid staining



**Storage:** keep your furniture inside and dry during extreme weather conditions.

**!** **Remark:** dirt that is left onto the furniture will settle into the skin of the coating and leaves marks

**!** Things that should be **avoided** on **FlexPlus™** products:



coffee, red wine,  
champagne, mayonaise, ...



**No jumping** on  
the furniture



**No shoes**, no high  
heel on the furniture